

INST-600-DCSM KIT

This instruction sheet shows the method to enlarge your existing 600 series meter mount to fit the new 600-ACSM or –DCSM.


There are many different plate sizes and shapes but only two meter mounting arrangements, with PM2 and without PM2 below the meter.

PM2




Both arrangements will use the same upper mount point but different lower points as indicated in the fitting diagrams.

1. Strip all equipment from the panel so only the metal plate, remains.
2. Protect the plate finish with strips of masking tape or similar product
3. Fit the template to the plate, the RED areas show the points the fasteners are fitted to.

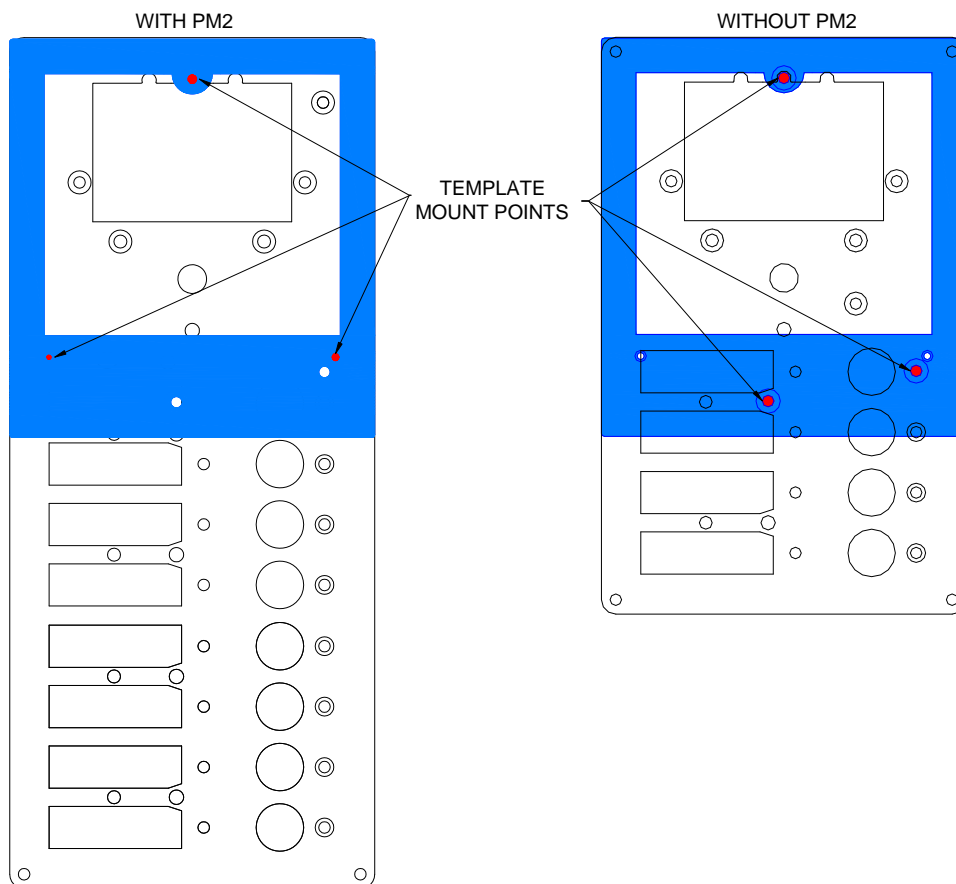

4. Use hole saw/jigsaw to cut out the interior of the template.
5. Remove template and cut off top middle tab (highlighted).

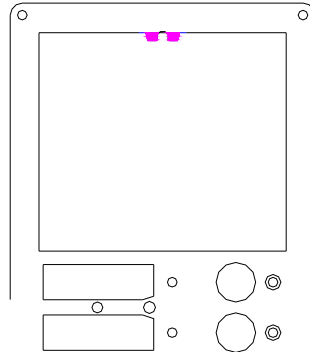

6. File finish the saw cut surface, so the new meter cover clips through from the front of the panel
7. Remove all masking tape protective coverings.
8. A new set of longer buttons is supplied so they can be actuated through the increased distance now the meter will be behind the plate. A small flat blade screwdriver will be required to fit into the seam and depress the clips to remove the front cover. The buttons can then be changed out and the front cover re-fitted.
9. The meter can now be fitted from the rear of the plate and it can be press fitted to the clips protruding from the front cover.
10. The panel can be reassembled and repowered.